


-- HEARTAIDE EZD INSTRUCTION SHEET

GETTING STARTED

Placing the electrodes - Two electrodes need to be fastened to the chest.

The first electrode (Patches) must be fastened approximately 4 inches above the nipple on the right side of the chest. (Just above the right breast)

The second electrode (Patches) must be fastened approximately 4 inches below the nipple on the left side of the chest. (Directly below the left breast)

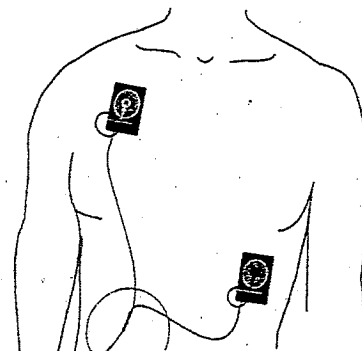

CONNECTING THE LEAD WIRES

Snap the lead wires onto the electrodes:

WHITE snaps onto the upper right electrode; **BLACK** snaps onto the lower left electrode.

OPERATING THE MONITOR

Insert the lead-set cable firmly into the monitor so the red dot on the cable faces the red button on the monitor, The monitor will power up and beep once; the display screen will flash hello and then to the loop screen; The monitor is now on and reviewing your EKG.

RECORDING AN EVENT

Press the red button until you hear a tone/beep.

Remain quiet and still until the tone ends and a jingle sound is heard.

When the display screen goes from record to the loop screen another event may be recorded if needed.

(Please wait a full minute in between recordings)

If the display screen indicates memory full, you must call Life Support Systems first to clear out your recordings.

SENDING YOUR EVENT

To clear out the monitor and send the data stored:

Call **Life Support Systems** at **1-800-659-8151**, 24 hours a day, 7 days a week.

Upon direction from the staff please do the following:

Remove the cable from the monitor; Press the red button until you hear a continuous tone/beep.

Place the mouth piece of the telephone over the speaker holes (red button).

When the tone/beep stops, pick up the phone and await further instructions from the staff member.

ERASING YOUR EVENTS

Plug the cable jack back into the monitor with the red dot on the cable facing the red button on the monitor.

The display screen will state to press the red button to erase recordings, now press the red button and you will hear a tone followed by a jingle sound. Display screen will read: Erased memory is now empty. The hello screen will re-appear and return to loop screen.

CHANGING YOUR BATTERY

Slide the monitor out of the belt clip

Slide and lift battery door located on the back side of the monitor.

Remove AA battery and replace with a new one as indicated on the back of the compartment